

INSTALLATION:

- 1. Choose a suitable location to install the Wireless Control Add-On.
- 2. Wire the Wireless Control Add-On based on the product ordered, note that there are three product options that correlate to the part number label on the Wireless Control Add-On. Each wire functions as per the tables below:



83862RevA – Wireless control add-on, Multi-Step Intensity

| Wire Label | Color | Function |
|-------------|--------|--|
| BATTERY + | RED | Battery positive (10-30VDC) |
| BATTERY – | BLACK | Battery negative |
| PUSH BUTTON | YELLOW | External push button, connect wires together momentarily to activate |
| PUSH BUTTON | GREEN | button, emulates configuration button |
| HIGH | VIOLET | High Intensity Control Output (0-12VDC), references battery negative |
| MED | BROWN | Medium Intensity Control Output (0-12VDC), references battery negative |
| LOW | BLUE | Low Intensity Control Output (0-12VDC), references battery negative |
| INFRARED | ORANGE | Infrared Intensity Control Output (0-12VDC), references battery negative |

83864RevA - Wireless control add-on, Contact Closure ON/OFF

| Wire Label | Color | Function |
|-------------|--------|--|
| BATTERY + | RED | Battery positive (10-30VDC) |
| BATTERY – | BLACK | Battery negative |
| PUSH BUTTON | YELLOW | External push button, connect wires together momentarily to activate |
| PUSH BUTTON | GREEN | button, emulates configuration button |
| CLOSURE | VIOLET | Contact closure output – control line. These connections connect |
| CLOSURE | BLUE | together on any visible intensity activation (20mA MAX). |
| ALL OUT | BROWN | All Intensity Control Output (0-12VDC), references battery negative |
| | | This output activates when any visible intensity activation |
| INFRARED | ORANGE | Infrared Intensity Control Output (0-12VDC), references battery negative |

83865RevA – Wireless control add-on, Battery Voltage, Switched - ON/OFF

| Wire Label | Color | Function |
|-------------|--------|--|
| BATTERY + | RED | Battery positive (10-30VDC) |
| BATTERY – | BLACK | Battery negative |
| PUSH BUTTON | YELLOW | External push button, connect wires together momentarily to activate |
| PUSH BUTTON | GREEN | button, emulates configuration button |
| SWITCHED - | BROWN | Switched output negative (Optional, this is connected to battery |
| | | negative) |
| SWITCHED + | ORANGE | Switched battery positive output. |
| | | Output will fault if >5A for >60ms and self-recover |

87784RevA - Wireless control add-on, SEPS P1

| Wire Label | Color | Function |
|------------|--------|---|
| BATTERY + | RED | Battery positive (10-30VDC) |
| BATTERY – | BLACK | Battery negative |
| INPUT + | YELLOW | +12V input (active high), internal SW2 in right position |
| SWITCHED + | WHITE | Switched battery positive output. Will fault if >5A for >60ms and recover |

- 3. Install and mount the provided antenna.
- 4. When power is available to the Wireless Control Add-On, the "RADIO ON" LED will flash.
- 5. To turn the Wireless Control Add-On outputs OFF press the "CONFIGURATION" button once.

PROGRAMMING:

The Wireless Control Add-On can be programmed with either the "CONFIGURATION" button on the box, or a Handheld Controller (HHC). See table below to program the product with the button method.

NOTE: When "Auto" mode is enabled, the product must be turned off manually to stop operation.

| 1. Hold Button until ↓ | 2. Enter desired number of presses. | | | | | | |
|------------------------|-------------------------------------|----------|----------|-----------|-------------|--|--|
| | 1 PRESS | 2 | 3 | 4 | 5 PRESSES | | |
| | | PRESSES | PRESSES | PRESSES | | | |
| No Hold | Lights Off | Auto Low | Auto Med | Auto High | | | |
| 1 Flash | Temp | Temp | Temp | | | | |
| | Low | Med | High | | | | |
| 1→2 Flashes | | Cont Low | Cont Med | Cont High | | | |
| 1→2→3 Flashes | IR | | | | | | |
| | Toggle | | | | | | |
| 1→2→3→4 Flashes | | UCS | | | Radio Error | | |
| | | Status | | | Status | | |
| 1→2→3 →4→5 | | | | | | | |
| Flashes | | | | | | | |

Configuration Modes:

For example, to enable "Temp High":

- 1. Hold the button down until the "CONFIGURATION" LED flashes 1 time.
- 2. Release the button.
- 3. Quickly press the button 3 times.
- 4. The "CONFIGURATION" LED will then flash 3 times.
- 5. The "HIGH" LED will then flash as this mode is now enabled.

WIRELESS CONTROL ADD-ON LAYOUT:

