



Vanguard® MKR 372 & MKR 371 Installation Guide

The following guide provides installation steps for the LED marker provided with the FTS 370, FTS 371 and FTS 270/372 Vanguard systems with marker cable that has a RED, BLACK, WHT/BLU and bare DRAIN wire.

1. Open the access plate by loosening the (2) captive screws enough to swing the cover open and remove the installed wire nuts.

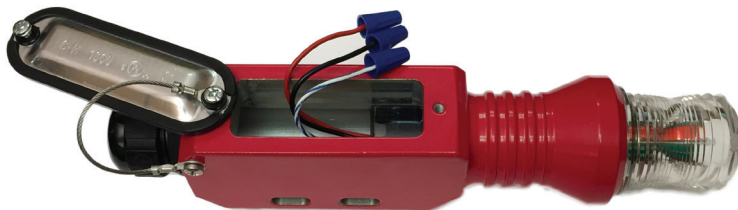

2. Feed the marker cable through the black cord grip and strip approximately 1/4" from the jacket of each conductor. Cut off the the bare drain wire as this will not be used in the marker base.

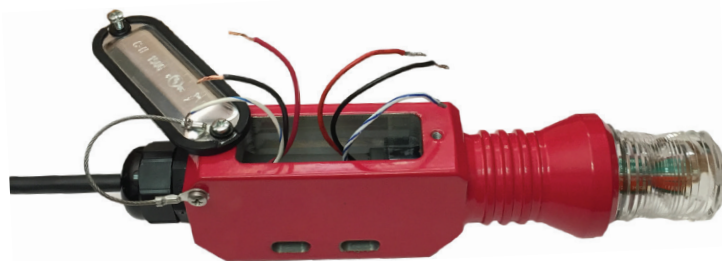

3. Using the supplied wire nuts and electrical tape connect the (2) Red wires together, the (2) Black wires together, and the (2) White\Blue wires together.



4. Carefully place the wires inside the marker base and close the access plate. Ensure the screws and the cord grip are tight to prevent moisture intrusion.

